 



PARTS LIST

Shift knob

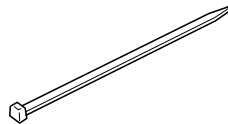


Flange nut

Shift lever collar
(Not used)Ty-rap
(Not used)Boot ring
(Not used)**TOOLS REQUIRED**


14 mm Combination wrench

INSTALLATION

1. Remove the shift knob by turning it counter-clockwise.

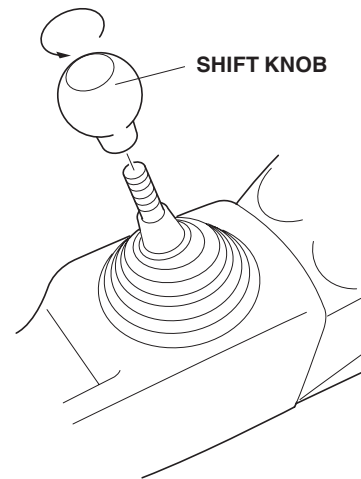

2. Install the flange nut on the shift lever to the end of the threads. Note the direction of the flange nut.

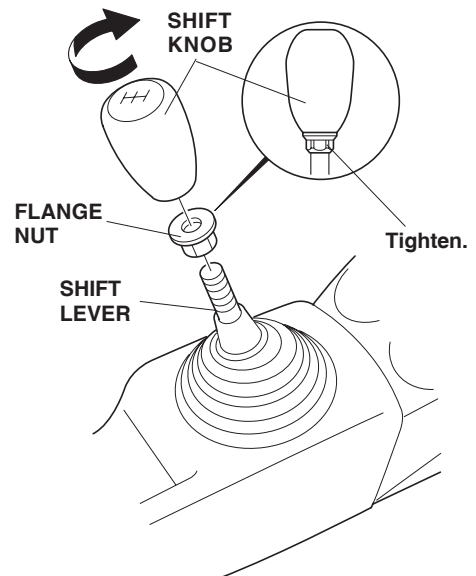

3. Install the shift knob on the shift lever until it's tight, then place it in the correct location, and tighten the flange nut securely.