INSTALLATION	Accessory ROOF RAILS P/N 08L02-SZA-100A	Application 2012 PILOT	Publications No. All 46396 Issue Date
			AUG 2011
PARTS LIST	T(OOLS AND SUPPLIES REQU	IRED
Left roof rail	Phillips screwdriver Flat-tip screwdriver Shop towel Needle nose pliers T-30 Torx driver		
Right roof rail	Fi Di 3 Pi Ey		
Left front roof rail cover	ar So th •	 and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857. Air saw (Snap-on AT192A) Plastic trim tool (T/N SILTRIMTL10) 	
Right front roof rail cover		ustration of the Roof Rails In	nstalled on the Vehicle
Left rear roof rail cover (RIGHT ROOF RAIL	LEFT ROOF RAIL
Right rear roof rail cover			
8 Torx nuts			
4 Roof molding clips			

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- Be extremely careful not to damage the roof and other finished surfaces of the body when installing the roof rails.

Installing the Roof Rails


1. Open the tailgate. Using a plastic trim tool, pry up on the rear end of the left roof molding cover.

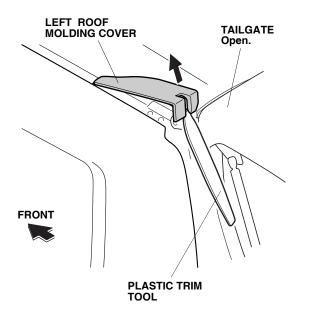

2. Using a pushpin, pierce two holes at the scribe marks on the left roof molding cover.

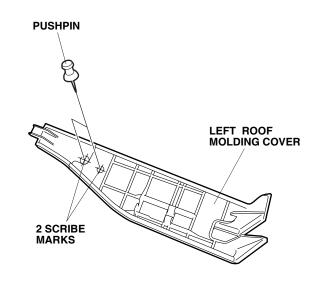


3. While wearing eye protection, drill two holes in the left roof molding cover with a 3 mm drill bit at the pierced marks made in step 2.

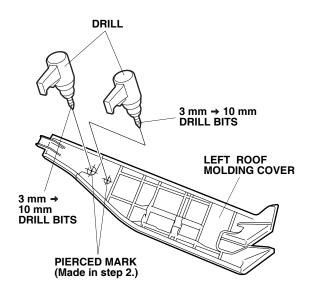


4. Enlarge the two holes with a 10 mm drill bit. Remove any burrs.


5. While wearing eye protection, use an air saw to cut the left roof molding cover along the scribe line as shown. Remove any burrs.

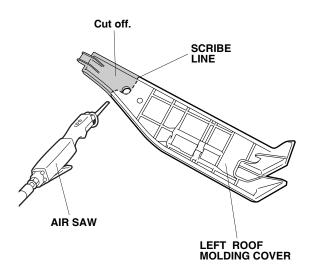


6. Remove the left roof molding by carefully lifting it upward from the four vehicle roof molding clips.

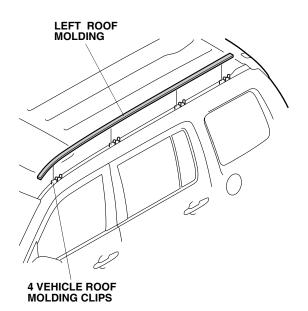


7. Remove and discard the four vehicle roof molding clips from the left roof molding or the stud bolt.

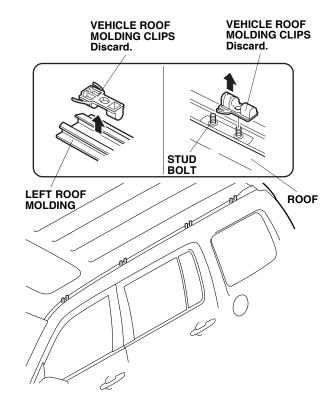

8. Remove any excess sealant from the stud bolts.

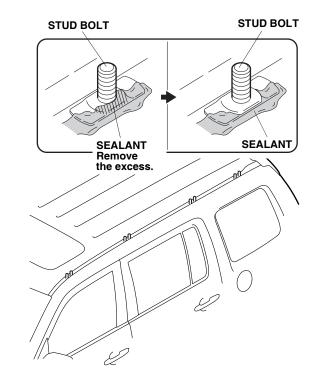


9. While wearing eye protection, use an air saw to cut the roof molding at the measurements shown.

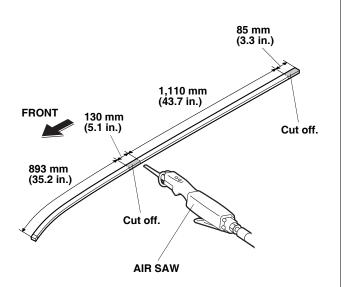

ROOF MOLDING LEFT COVER TAILGATE

11. Reinstall the roof molding left cover.


12. Reinstall the roof moldings back into the left roof channel using the two new roof molding clips installed in step 10.

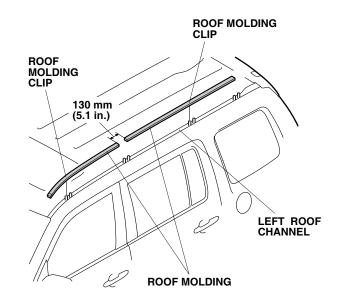


ROOF MOLDING CLIP

molding.

10. Install one new roof molding clip to each roof

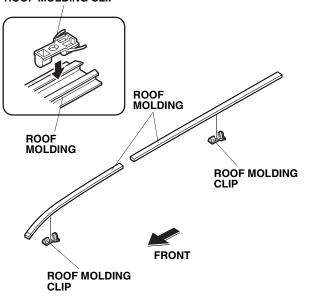


13. Install the left roof rail with four Torx nuts. Make sure the roof rail is installed in the correct position. Torque the Torx nuts to 12 N·m (9 lbf·ft).

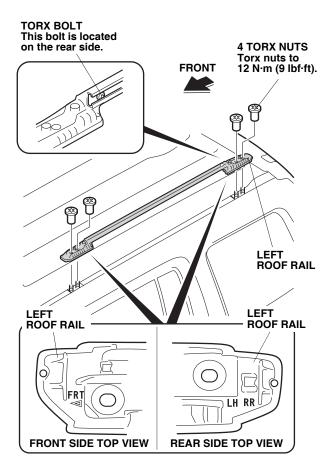

14. Repeat steps 1 through 13 for the right side of the vehicle.

15. Install the left front roof rail cover and the left rear roof rail cover to the left roof rail (two clips for each cover).

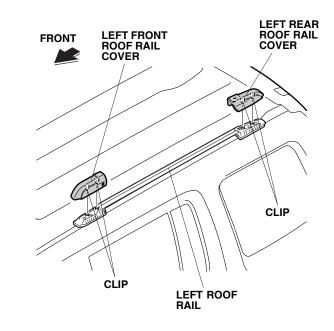

16. Install the right roof rail covers the same way.