



# INSTALLATION INSTRUCTIONS

Accessory

HALF NOSE MASK  
P/N 08P35-S9A-101

Application

2006 CR-V

Publications No.

All 30549

Issue Date


SEP 2005

Put this information in the glove box with the vehicle owner's manual.


**NOTE:** The nose mask *will not fit* on vehicles equipped with body side cladding.

## PARTS LIST


Mask  
(hood section)

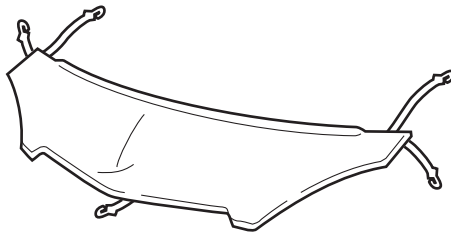

Mask  
(left fender section)

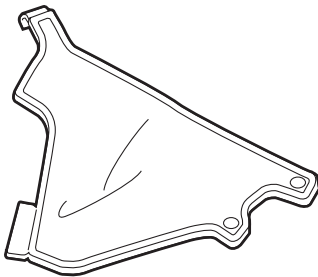

Mask  
(right fender section)

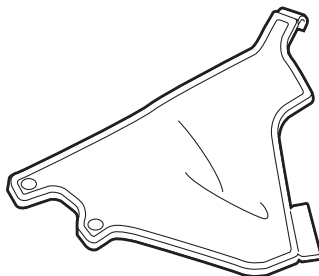

4 Snap-screws



4 Fenderwell nuts



4 Washers



## TOOLS AND SUPPLIES REQUIRED

Stubby #2 Phillips screwdriver

Flat-tip screwdriver

Clip remover


## INSTALLATION

### NOTE:


- Make sure the vehicle and the nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure to install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.

## Installing the Hood Section

1. Open the hood, and remove the two clips from the hood insulator. Save the clips for your customer.

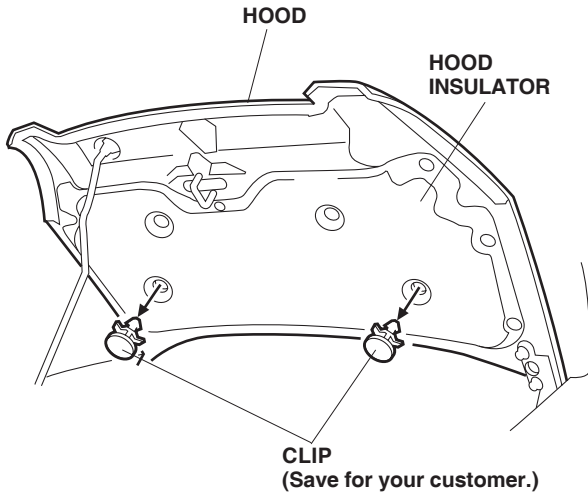


2. Fit the corners of the mask section around the hood. Adjust the mask so that it fits smoothly over the edges. Attach the center "S" hook to the hood.

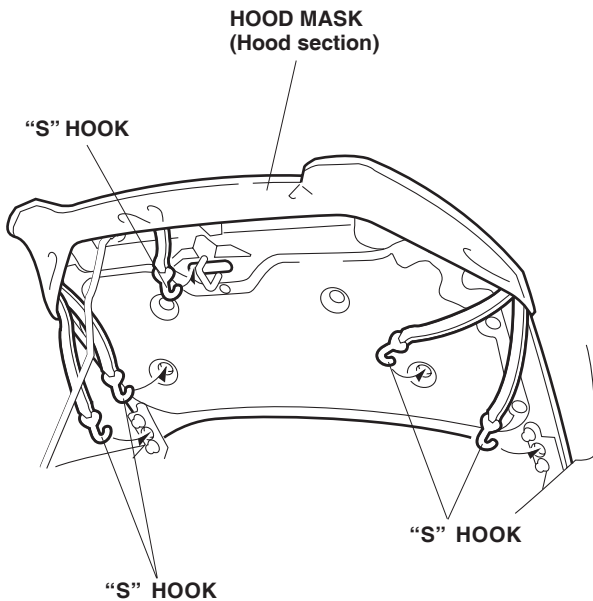

3. Secure the mask by hooking the four "S" hooks to the holes in the back of the hood.


## Installing the Fender Section

4. Pry out the plastic pin, and remove the two expansion clips that fasten the inner fender; remove and retain the two clips, then clean the area around the hole.

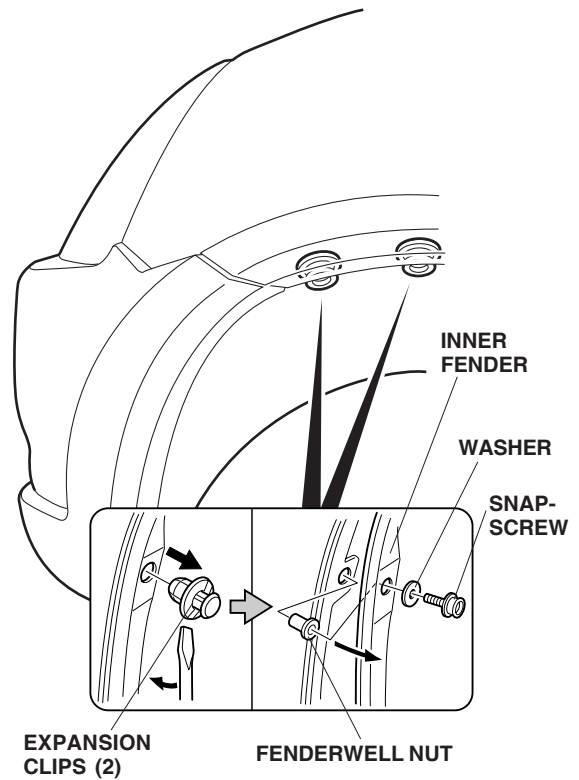


5. Pull the inner fender away, and press two fenderwell nuts (supplied) into the holes in the fender flange.
6. With their washers in place, securely tighten two snap-screws into the fenderwell nuts.
7. Repeat steps 4 through 6 on the other side of the vehicle.


- Attach the plastic clip to the inside edge of the fender.

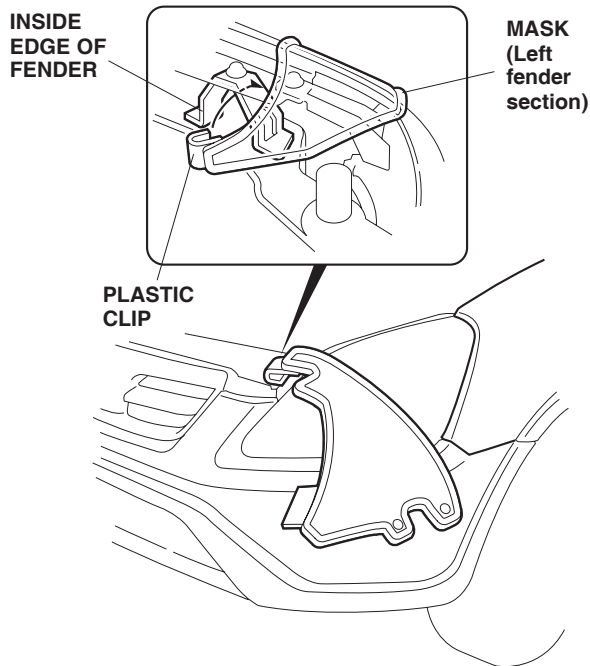

- Slip the pocket over the upper corner of the fender. Insert the tab between the headlight and the fender.

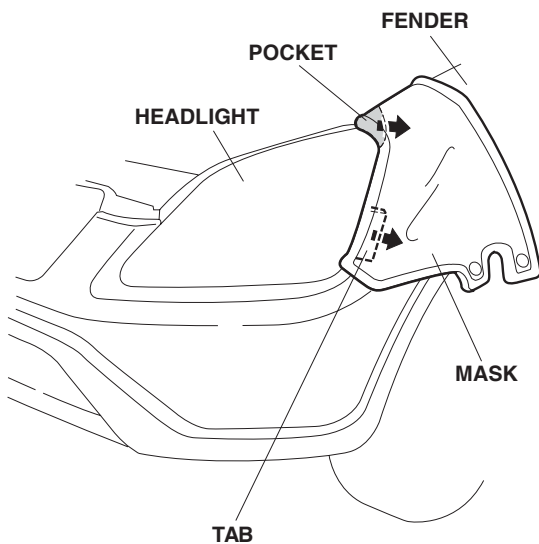

- Pull the rear edge of the mask toward the wheelwell, smooth out any wrinkles, and attach the snaps on the mask to the snap-screws on the fender.

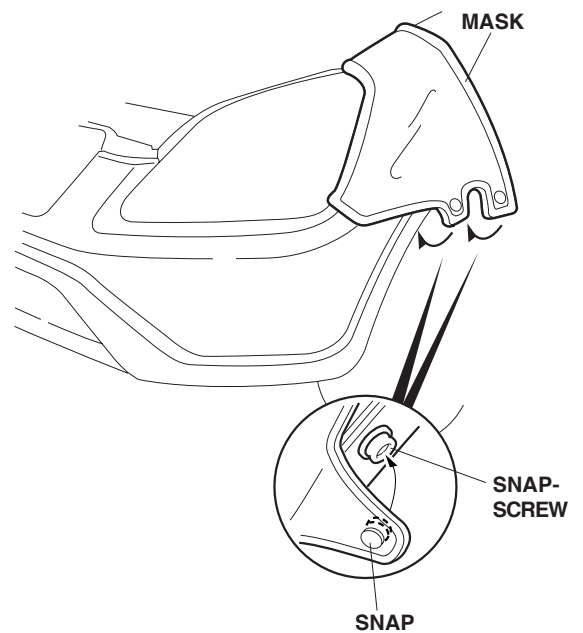

- Repeat steps 8 through 10 to install the right mask on the passenger's fender.

### CLEANING THE HALF NOSE MASK

Use a sponge or cloth dampened with a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry, out of direct sunlight. Make sure the mask is completely dry before you reinstall it.