



INSTALLATION INSTRUCTIONS

Accessory
CARGO LINER
P/N 08P42-SWA-100


Application
2010 CR-V

Publications No.
All 42390
Issue Date
AUG 2009

Put this instruction in the glove box with the vehicle owner's manual.

PARTS LIST

Cargo liner

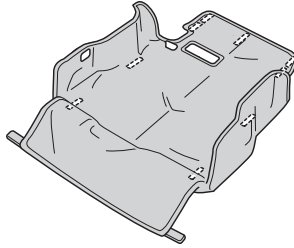

16 Adhesive fasteners



8 Alcohol swabs





Illustration of the Cargo Liner Installed on the Vehicle

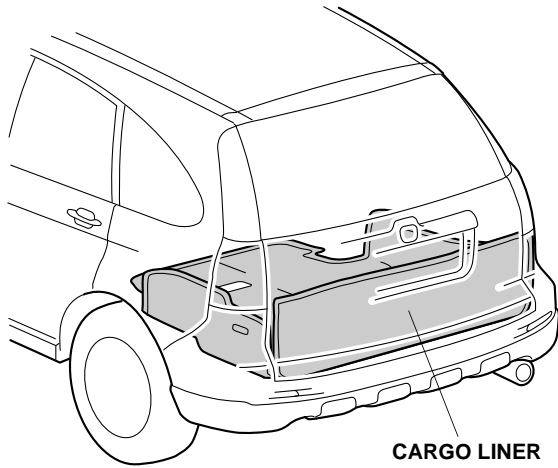


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE: This cargo liner kit should be installed only if the ambient air temperature is 15°C (60°F) or above.

Installing the Cargo Liner


1. Fold the rear seats forward as described in the vehicle owner's manual.

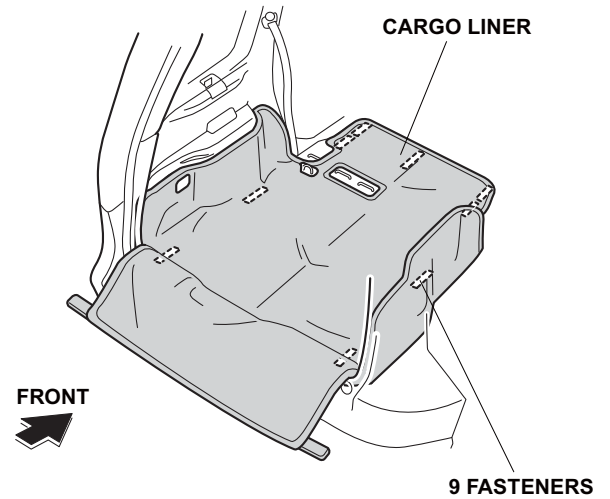


2. Open the tailgate. Spread the cargo liner along the floor and up each side trim. Attach the cargo liner to the floor with the nine fasteners.
3. Fit the cargo liner along the left rear side trim. Locate the areas on the side trim where each fastener will attach, then fold down the cargo liner. Using an alcohol swab, clean the side trim where each fastener will attach.

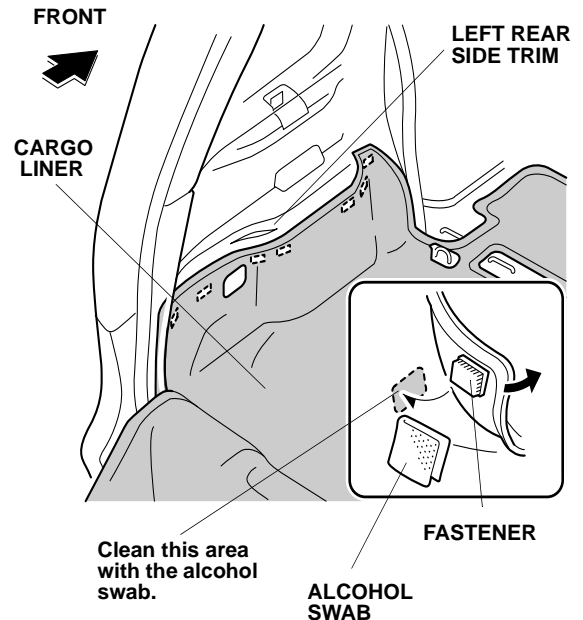


4. Locate seven fasteners on the cargo liner. Attach one adhesive fastener to each of the seven fasteners on the cargo liner.

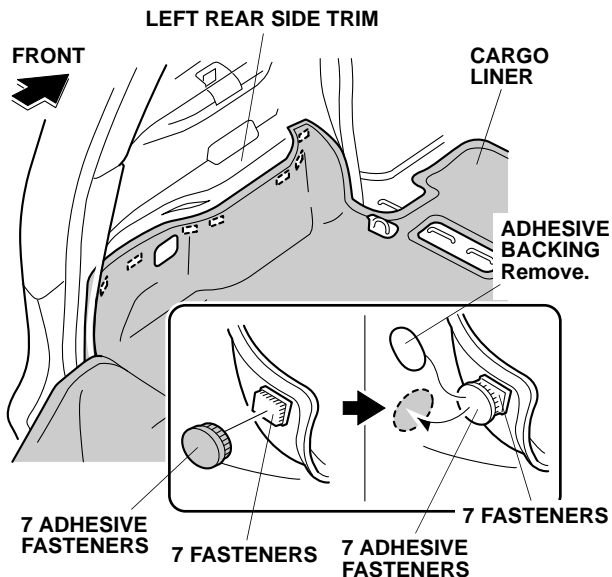

5. Remove the adhesive backing from the seven adhesive fasteners, fold the cargo liner up, and attach the seven adhesive fasteners to the left rear side trim.
6. Repeat steps 3 thru 5 to install seven adhesive fasteners to the right rear side trim.
7. Fold the rear section of the cargo liner up, and locate the area on each side trim where the cargo liner will attach. Using an alcohol swab, clean the left and right rear side trim where each fastener will attach.

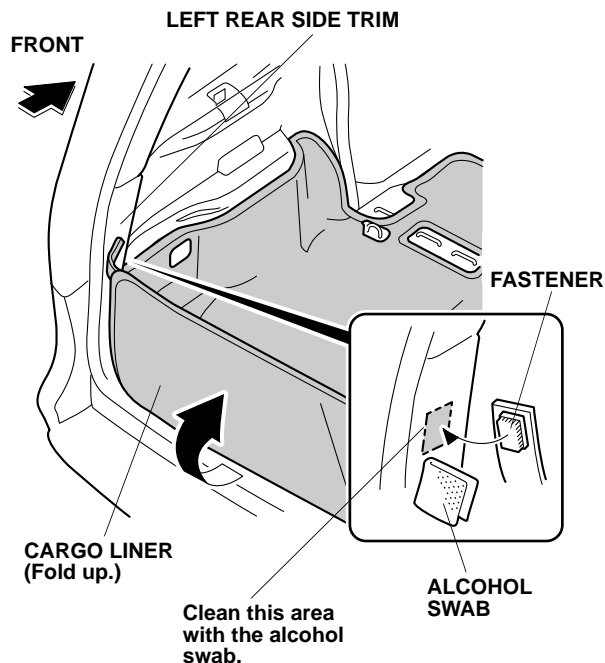

8. Attach one adhesive fastener to each fastener on the rear section of the cargo liner.

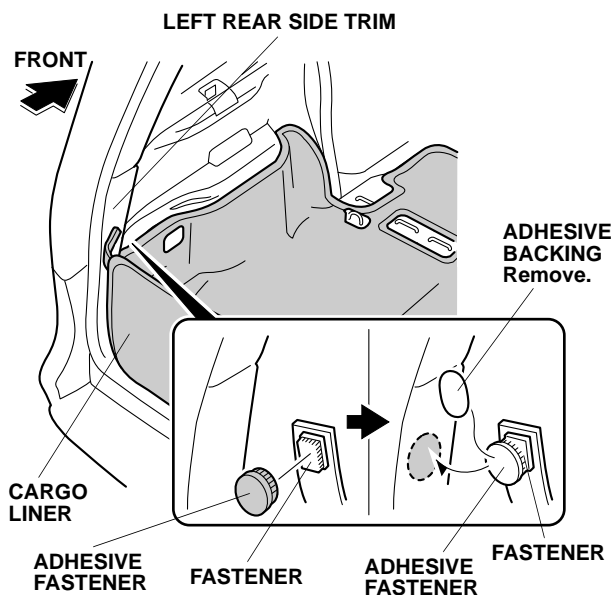

9. Remove the adhesive backing from each adhesive fastener, fold the cargo liner up, and attach one adhesive fastener to the left and right rear side trim.