	Accessory	Application	Publications No.
INSTALLATION	FRONT SPLASH GUARD P/N 08P08-SWA-100		All 44626
INSTRUCTIONS		2011 CR-V	Issue Date
			AUG 2010

NOTE: Front splash guards cannot be installed if the vehicle is equipped with running boards.

## PARTS LIST

Left front splash guard



Right front splash guard




## TOOLS AND SUPPLIES REQUIRED

Stubby Phillips screwdriver


## INSTALLATION

NOTE:


- These instructions show the left splash guard being installed. The same procedure applies to installing the right splash guard.
- Clean and wax the areas to be covered with a high-quality paste wax.

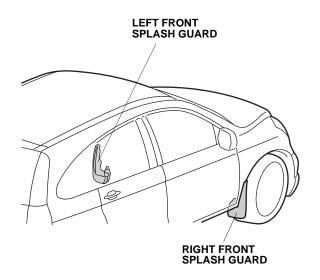

- 1. Turn the steering wheel all the way counterclockwise.
- 2. Remove and retain the three self-tapping screws fastening the left front inner fender to the front fender and fenderwell.

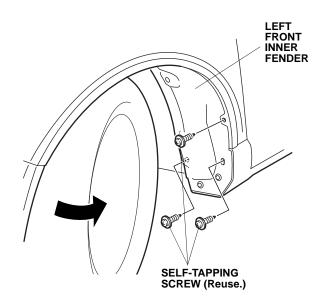

3. Position the left front splash guard on the left front inner fender, and install the three self-tapping screws you removed in step 2.

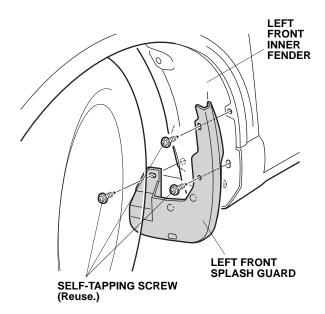

4. Turn the steering wheel all the way clockwise, and repeat steps 2 and 3 to install the right splash guard.